 


Installation

Care in mounting and care in correct operation will mean a long and satisfactory life for your Da-Lite wall/ceiling screen. Locate the screen where the audience can best see it and where other furnishings in the room permit. Mount the screen so that bottom of picture surface, when fully extended, will be above the heads of viewers.

Built-In Hangers

Da-Lite wall/ceiling screens may be mounted on a wall, map rail, suspended from ceiling or extension brackets. Wall screens must be mounted level and with the case-back parallel to the wall.

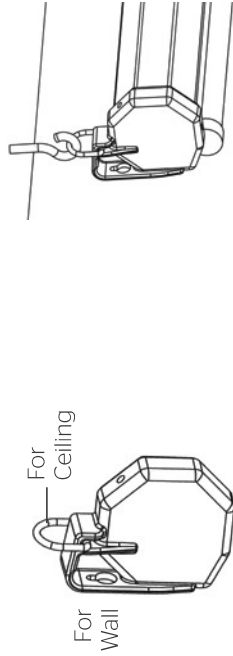

For Wall Mounting

Use the keyhole slot at the back of the hanging bracket for flush wall suspension. Position screws or other fasteners into the wall and hang screen by using the slots.

 
For Ceiling Suspension

If the screen is to be ceiling mounted, two screw hooks should be placed in a beam or other solid surface. For drop ceilings, Da-Lite's T-Bar Clips may be purchased.

Screen Accessories

Wall Brackets (75# per pair maximum)

Da-Lite No. 6 and No. 11 Non-adjustable wall brackets and No. 23 adjustable extension wall brackets are ideal for keystone elimination, clearance, or corner mounting. The screen brackets should be fastened to the studding or other solid surface and not in the plaster only. Suspend screen from "D" rings.

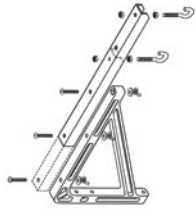

No. 23 Adjustable Wall Brackets

Screen can be extended 10" to 24" from wall by wing nut and bolt adjustment.



 
No. 6 Wall Brackets

Screen can be extended 6" from wall.




No. 11 Wall Brackets

Screen can be extended 10" or 14" from wall by changing position of bracket.

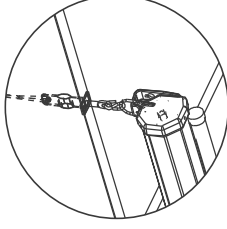

T-Bar Clip

 For Drop Ceilings 50 lb. max. load capacity.

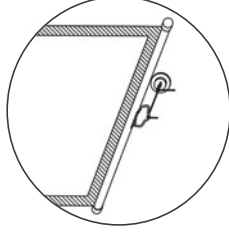

Tilt Lock

For Keystone Elimination Hold back bottom of screen in tilted position to eliminate keystoneing.

Operating Instructions

To Lower Picture Surface

Pull screen down all the way. HESITATE - then allow screen to retract VERY SLOWLY until it locks in place.

To Raise Picture Surface

Pull down on the pull bail, then raise quickly, as a window shade. Keep control of the picture surface. Do not allow it to roll uncontrolled into the case or damage will result.

Protect Your Screen

by keeping it rolled in its protective case when not in use. Always examine both front and back of surface before re-rolling into case to make certain screen is free of dust, dirt or other foreign matter. Use a very soft duster to gently remove any foreign particles.